


# DIFFUSE High Mounting

## Tongue-and-groove - CONVEX CURVE

NOTES:

1. TONGUE AND GROOVE ASSEMBLY REQUIRES 3/8" INSERTION MARGIN.
2. INSTALL RIB OR FURRING STRIP USING FASTENER APPROPRIATE FOR SUBSTRATE.
3. INSTALL ONTO FURRING STRIPS OR RIBS SPACED EVERY 12".
4. MINIMUM RADIUS: 65". FOR SMALLER RADIUS USE CURVED EDGE PRODUCT.

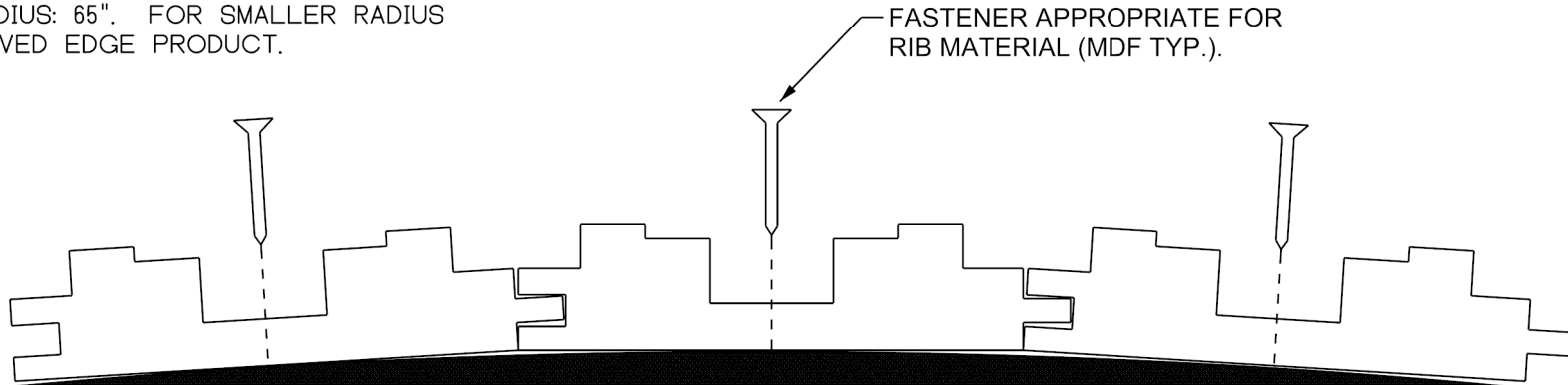

FASTENER APPROPRIATE FOR RIB MATERIAL (MDF TYP.).

WALL BY OTHERS

CURVED RIB (AVAILABLE FROM LISTEN AUDIO) MOUNTED EVERY 12" VERTICAL INCHES. MINIMUM RADIUS OF 65".

DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED TOLERANCES: .XXX = ± .010; .XXX = ± .005 FRACTIONAL = ± 1/64 ANGULAR = 1°	DRAWN	NAME	DATE
	CHECKED		
	ENG. APPR.		
	MFG. APPR.		
MATERIAL:	COMMENTS:		PART NO.
FINISH:			DIFFUSE HIGH - CONVEX
DO NOT SCALE DRAWING			TITLE: INSTALLATION TEMPLATE

**LISTEN**

2190 S. JASON ST.  
DENVER, CO 80223 TEL: 720-252-6865

REV: A

THIS DOCUMENT AND THE PROPERTY CONTAINED HEREIN IS THE PROPERTY OF LISTEN AUDIO. ANY REPRODUCTION, DISCLOSURE OR USE THEREOF IS PROHIBITED, EXCEPT AS AUTHORIZED IN WRITING. THE REPLICATOR ACCEPTS THE RESPONSIBILITY FOR MAINTAINING THE CONFIDENTIALITY OF THE CONTENTS OF THIS DOCUMENT.