


# DIFFUSE High Mounting

## Tongue-and-groove

NOTES:

1. TONGUE AND GROOVE ASSEMBLY REQUIRES 3/8" INSERTION MARGIN.
2. INSTALL USING FASTENER APPROPRIATE FOR SUBSTRATE.
3. INSTALL ONTO FURRING STRIPS SPACED EVERY 12".

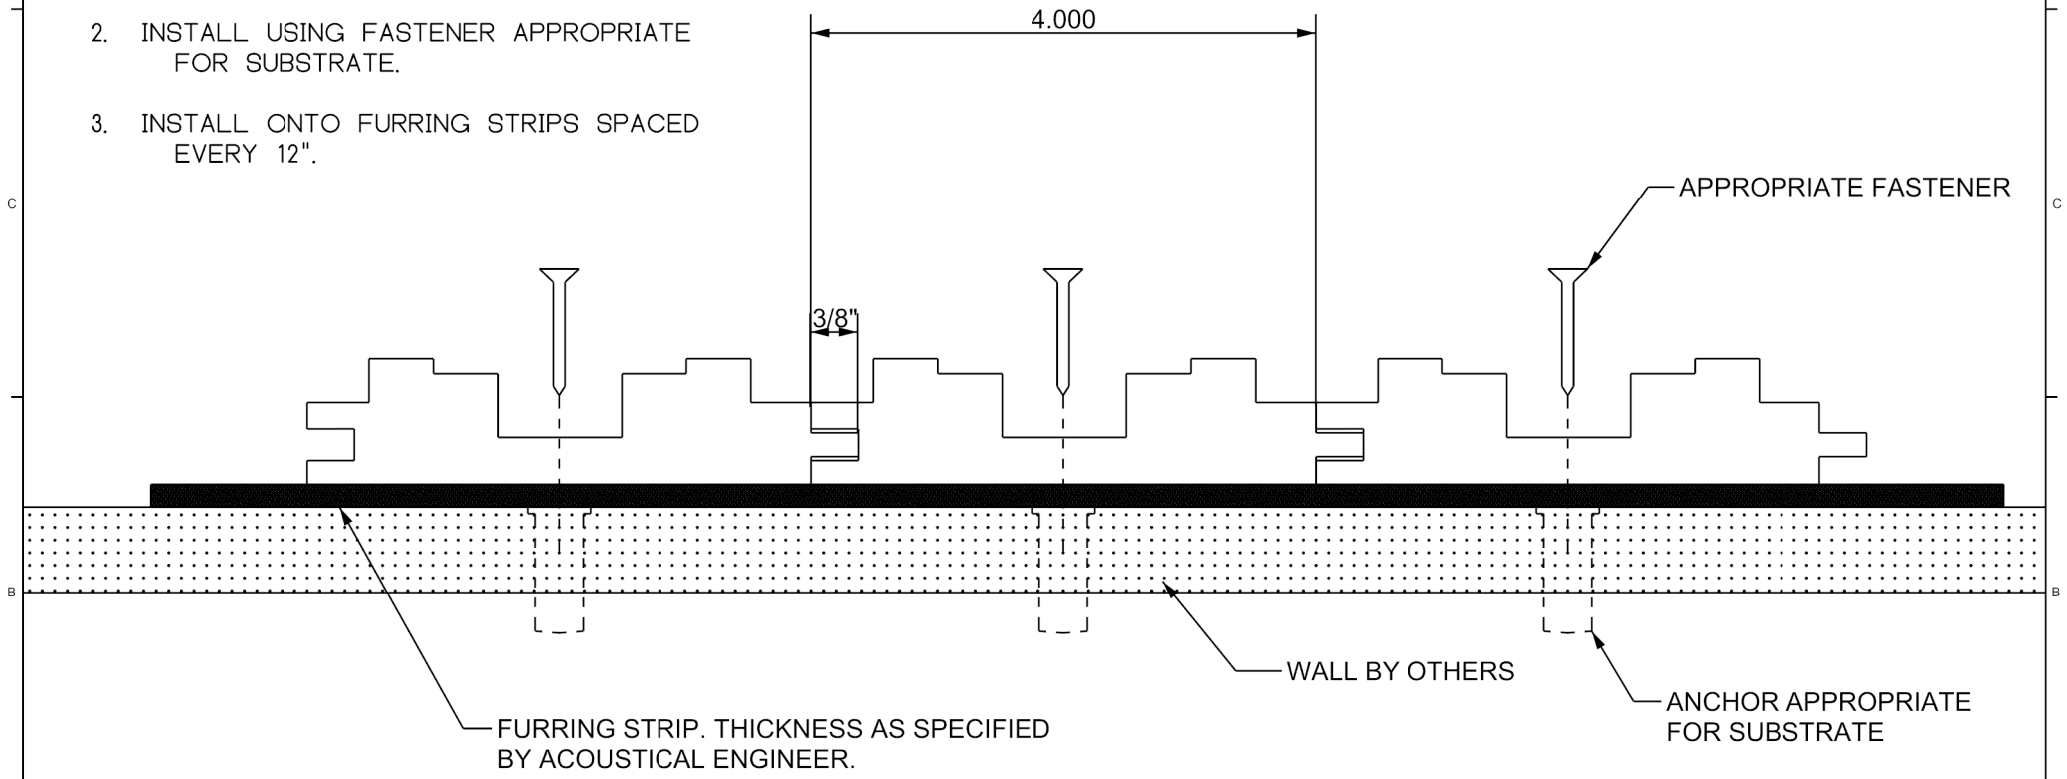

DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED TOLERANCES: .XX = ± .010; .XXX = ± .005 FRACTIONAL = ± 1/64 ANGULAR = 1°	DRAWN	NAME	DATE
	CHECKED		
	ENG. APPR.		
	MFG. APPR.		
MATERIAL:	COMMENTS:		PART NO.
FINISH:			DIFFUSE HIGH TONGUE/GROOVE
DO NOT SCALE DRAWING			TITLE: INSTALLATION TEMPLATE
			REV.: A

THIS DOCUMENT AND THE PROPERTY CONTAINED HEREIN IS THE PROPERTY OF LISTEN AUDIO. ANY REPRODUCTION, DISCLOSURE OR USE THEREOF IS PROHIBITED, EXCEPT AS AUTHORIZED IN WRITING. BY LISTEN AUDIO SYSTEMS, INC. THE REPLICANT ACCEPTS THE RESPONSIBILITY FOR MAINTAINING THE CONFIDENTIALITY OF THE CONTENTS OF THIS DOCUMENT.

**LISTEN**  
 2190 S. JASON ST.  
 DENVER, CO 80223 TEL: 720-252-6865